

DM 406 H

Reservdelar

Spare parts

Ersatzteile


Pieces de rechange

Piezas de repuesto


Ricambi

Peças sobresselente


No.	Pos.	Description	No.	Pos.	Description
501 35 81-01	A	Gearbox cover	531 11 90-49	B	Casing washer
501 35 82-01	A	Gearbox casing	531 11 90-52	A	Needle bearing NA 49/22
504 05 83-01	F	Husqvarna OIL 460 3dl.	531 11 90-53	B	Needle bearing NA 4908
531 11 10-17	B	Thrust bearing	531 11 90-54	A	Needle bearing NA 6904
531 11 10-26	A	Gear wheel	531 11 90-55	A	Needle bearing NK 25/16
531 11 10-29	A	Bearing bracket	531 11 90-56	A	Needle bearing NKS 32
531 11 10-44	B	Wear plate	531 11 90-60	B	Gamma sealing 40x57
531 11 10-45	A	Water swivel	531 11 90-61	A	Support washer 26x37x2
531 11 10-55	E	Top sliding ring	531 11 90-62	A	Shaft washer WS 81105
531 11 10-56	E	Bottom sliding ring	531 11 90-98	DE	Spring LBR 45 F
531 11 10-59	E	Valve cone	531 11 90-99	BDE	Ball 6 mm
531 11 10-60	E	Valve lining	531 11 91-13	E	Handle
531 11 10-62	E	Valve plate	531 11 91-74	A	Shaft seal 15x32x7
531 11 10-69	C	Return pipe	531 11 91-76	B	Shaft seal 40x55x7
531 11 10-70	D	Main valve	531 11 91-85	BD	Sealing washer 1/2"
531 11 10-71	D	Main valve lever	531 11 92-16	B	Screw M6S 6x8
531 11 10-72	D	Valve cover	531 11 92-29	A	Screw MC6S 5x22
531 11 10-73	A	Thrust bearing	531 11 92-53	E	Screw MLC6S 6x20
531 11 10-89	A	Gear shift bar	531 11 92-55	D	Screw MLC6S 6x45
531 11 11-02	E	Valve label	531 11 92-57	E	Screw MLC6S6x55
531 11 11-13	A	Axial support	531 11 92-66	E	O-ring 21.2x3
531 11 11-15	A	Bearing sleeve	531 11 92-70	C	O-ring 24.2x3
531 11 11-16	A	Gear level knob	531 11 92-93	C	O-ring 80x1.6
531 11 11-18	E	Stop pin	531 11 93-08	A	Key 6x6x16
531 11 11-19	E	Valve lever hub	531 11 93-19	C	Seal SCN 18x30x6
531 11 11-39	B	Handle	531 11 93-37	E	Plug VSTI M10x1
531 11 11-42	B	Spindle 1 1/4"	531 11 93-40	CE	Plug VST R1/2"
531 11 11-43	D	Valve casing DM 406 HL	531 11 93-41	D	Plug VSTI R1/4"
531 11 11-44	C	Retracting block DM 406 HL	531 11 93-43	C	Plug VSTI R3/8"
531 11 11-46	A	Input shaft DM 406 HL	531 11 94-12	B	Washer
531 11 11-48	B	Spindle cover 1 1/4"	531 11 94-81	A	Circlip AV 25
531 11 11-66	E	Valve lever	531 11 95-87	A	Intermediate shaft
531 11 11-67	B	Locking screw	531 12 13-44	C	Support ring SCN
531 11 11-71	B	Mounting plate DDS-50	531 14 10-86	E	Plug PLC
531 11 11-74	E	RPM label DM 406 HL	720 13 51-50	A	Cylindrical pin 6x16
531 11 11-85	E	RPM label DM 406 HL	720 18 10-50	B	Cylindrical pin 8x24
531 11 11-90	B	Adapter 1 1/4" to CR 28 tread	721 42 56-00	D	Locking pin 4x20
531 11 11-91	B	Spindle CR 32 for Japan	721 42 62-00	E	Locking pin 4x32
531 11 20-00	B	Mounting plate type 2 assy	723 52 22-01	E	Screw MFS 3x8
531 11 20-06	C	Hydraulic motor DM 406 HL	723 53 25-01	AD	Screw MFS 5x10
531 11 20-13	C	Watercoupling w. valve	725 53 70-01	B	Screw MC6S 6x20
531 11 20-19	A	Gear wheel DM 406 HL Compl	725 53 74-01	A	Screw MC6S 6x30
531 11 20-21	A	Gear carrier Compl	725 53 76-01	C	Screw MC6S 6x35
531 11 20-22	A	Gear wheel DM 406 HL Compl	725 54 55-01	BC	Screw MC6S 8x30
531 11 30-78	C	Seal scn assy	725 54 63-01	C	Screw MC6S 8x60
531 11 80-03	AC	Coupling	725 63 68-51	AB	Screw MF6S 6x16 10.9
531 11 80-05	C	Hose coupling	728 83 21-05	A	Stop screw SK6SS 5x6
531 11 80-18	C	Ball valve	731 23 18-01	B	Nut M8
531 11 80-49	D	Coupling	734 11 63-01	BC	Washer 8.4x16
531 11 80-50	D	Coupling	735 31 30-10	C	Circlip SGH30
531 11 80-80	E	Pressure relief valve	740 38 08-01	B	Sealing washer M6
531 11 81-13	B	Magnetic plug	740 42 03-00	AB	O-ring 5.1x1.6
531 11 81-59	A	Coupling 1/2"-3/8"	740 42 14-00	E	O-ring 16.1x1.6
531 11 81-78	B	Rubber hose	740 42 17-00	CD	O-ring 19.1x1.6
531 11 82-00	D	Adaptor sleeve	740 43 07-00	D	O-ring 9.3x2.4
531 11 83-55	C	Coupling	740 43 09-00	E	O-ring 11.3x2.4
531 11 90-14	C	Hose clamp	740 43 12-00	D	O-ring 14.3x2.4
531 11 90-32	F	Wrench 32mm	740 43 13-00	D	O-ring 15.3x2.4
531 11 90-33	F	Wrench 41mm	740 44 04-00	D	O-ring 19.2x3
531 11 90-35	A	Retaining ring 24x2	740 44 05-00	E	O-ring 22.2x3
531 11 90-36	A	Retaining ring 30x2	740 44 09-00	E	O-ring 32.2x3
531 11 90-39	A	Bearing washer	740 51 27-00	A	Shaft seal 15x30x7
531 11 90-40	B	Bearing washer			
531 11 90-41	A	Thrust bearing			
531 11 90-42	A	Thrust bearing			
531 11 90-43	B	Thrust bearing			
531 11 90-44	B	Wheel			
531 11 90-45	D	Ball D20xM5			
531 11 90-47	E	Sealing washer marked			
531 11 90-48	A	Bearing washer			

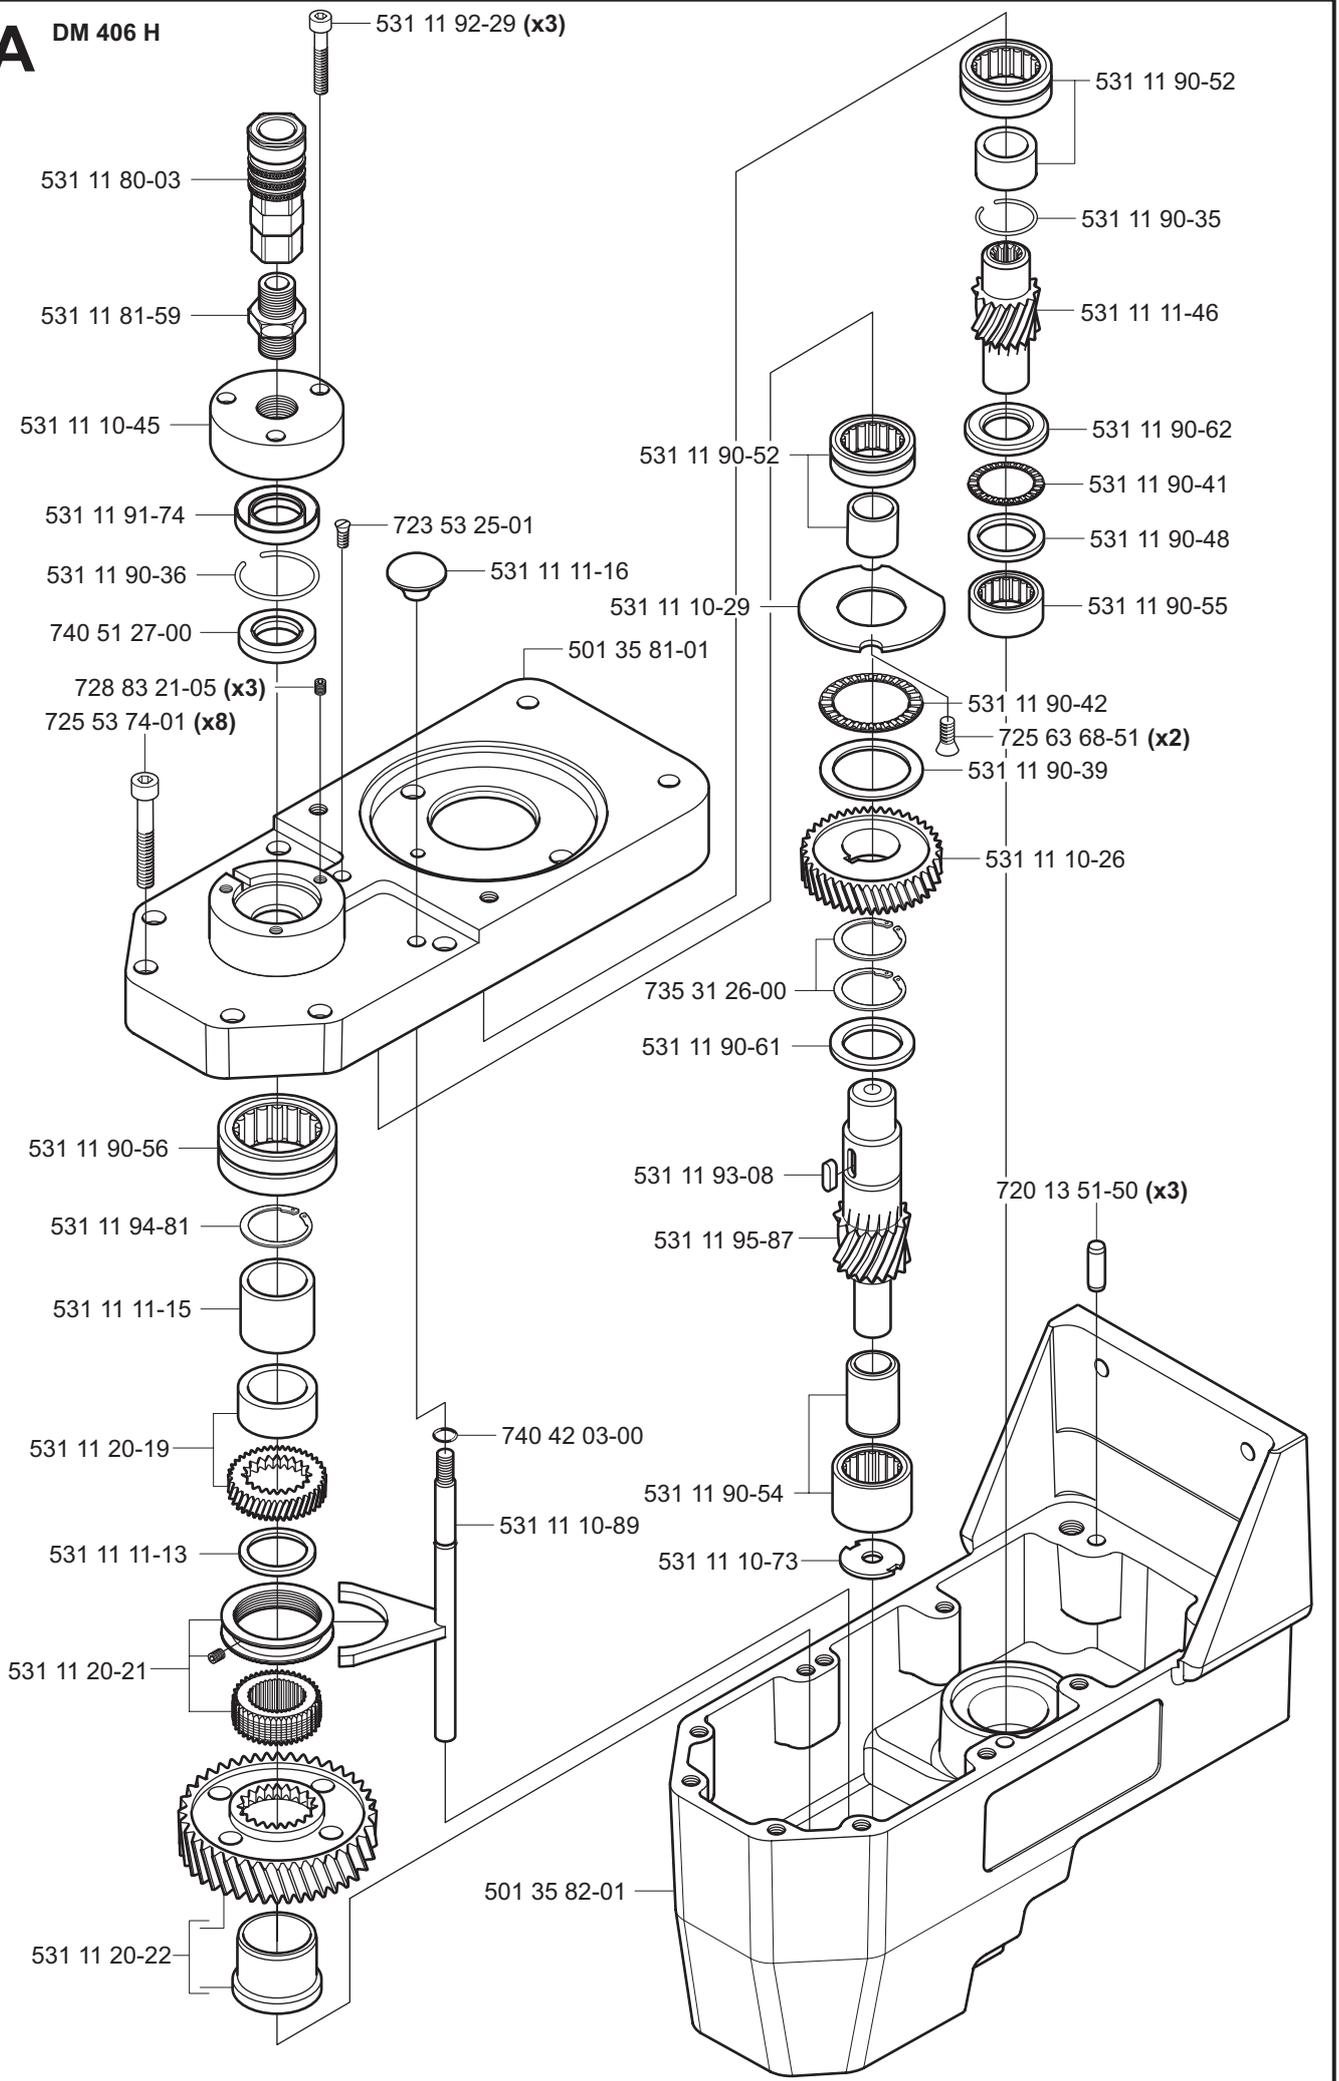A**DM 406 H**


B DM 406 H

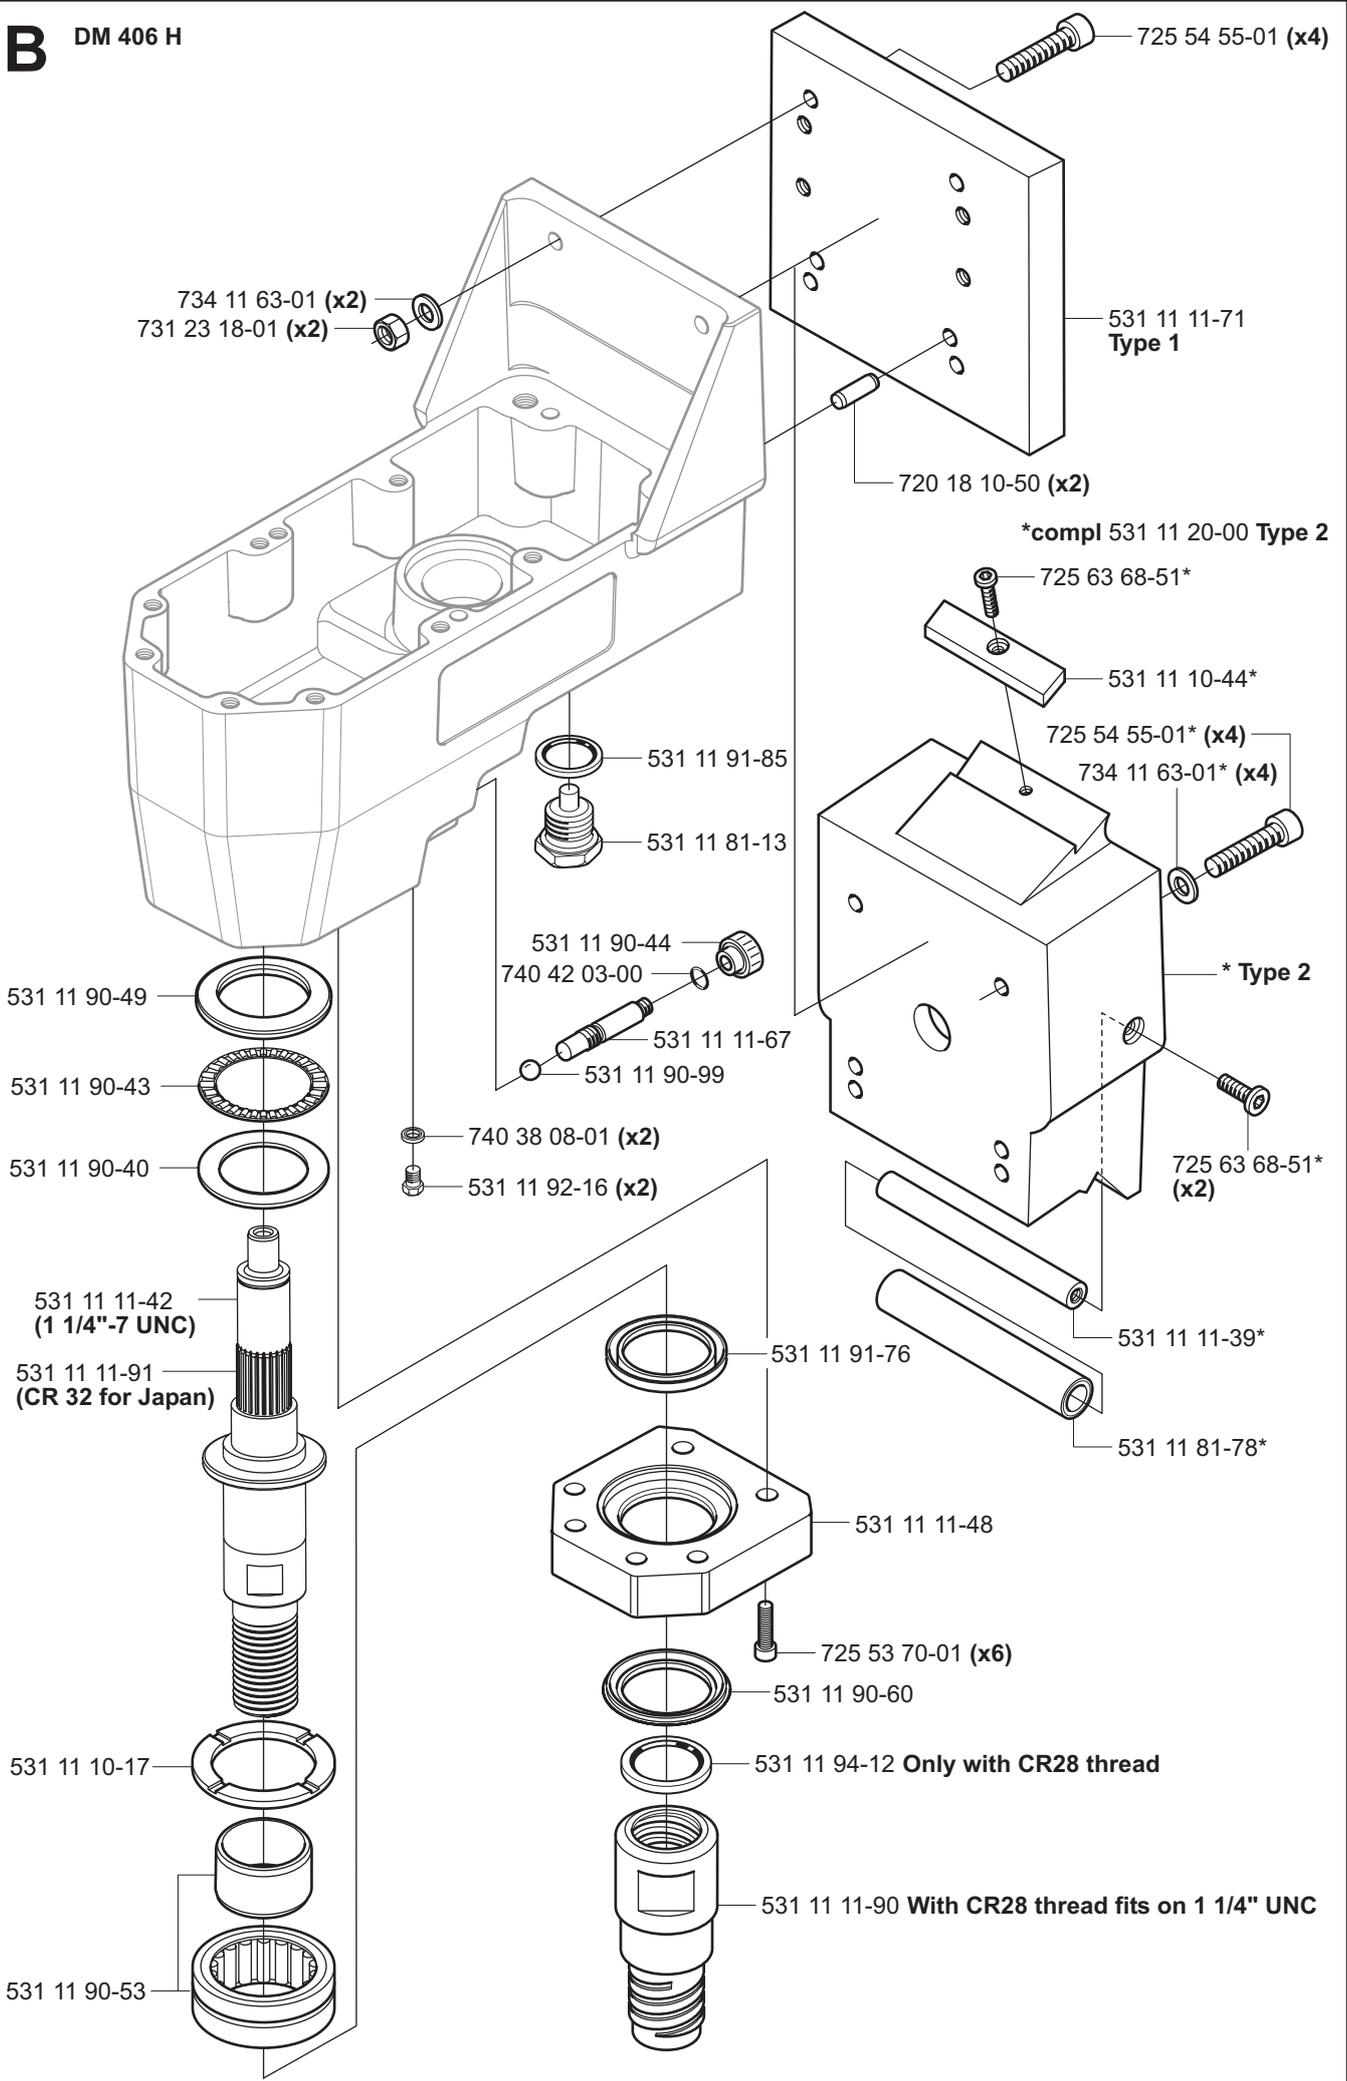


C DM 406 H

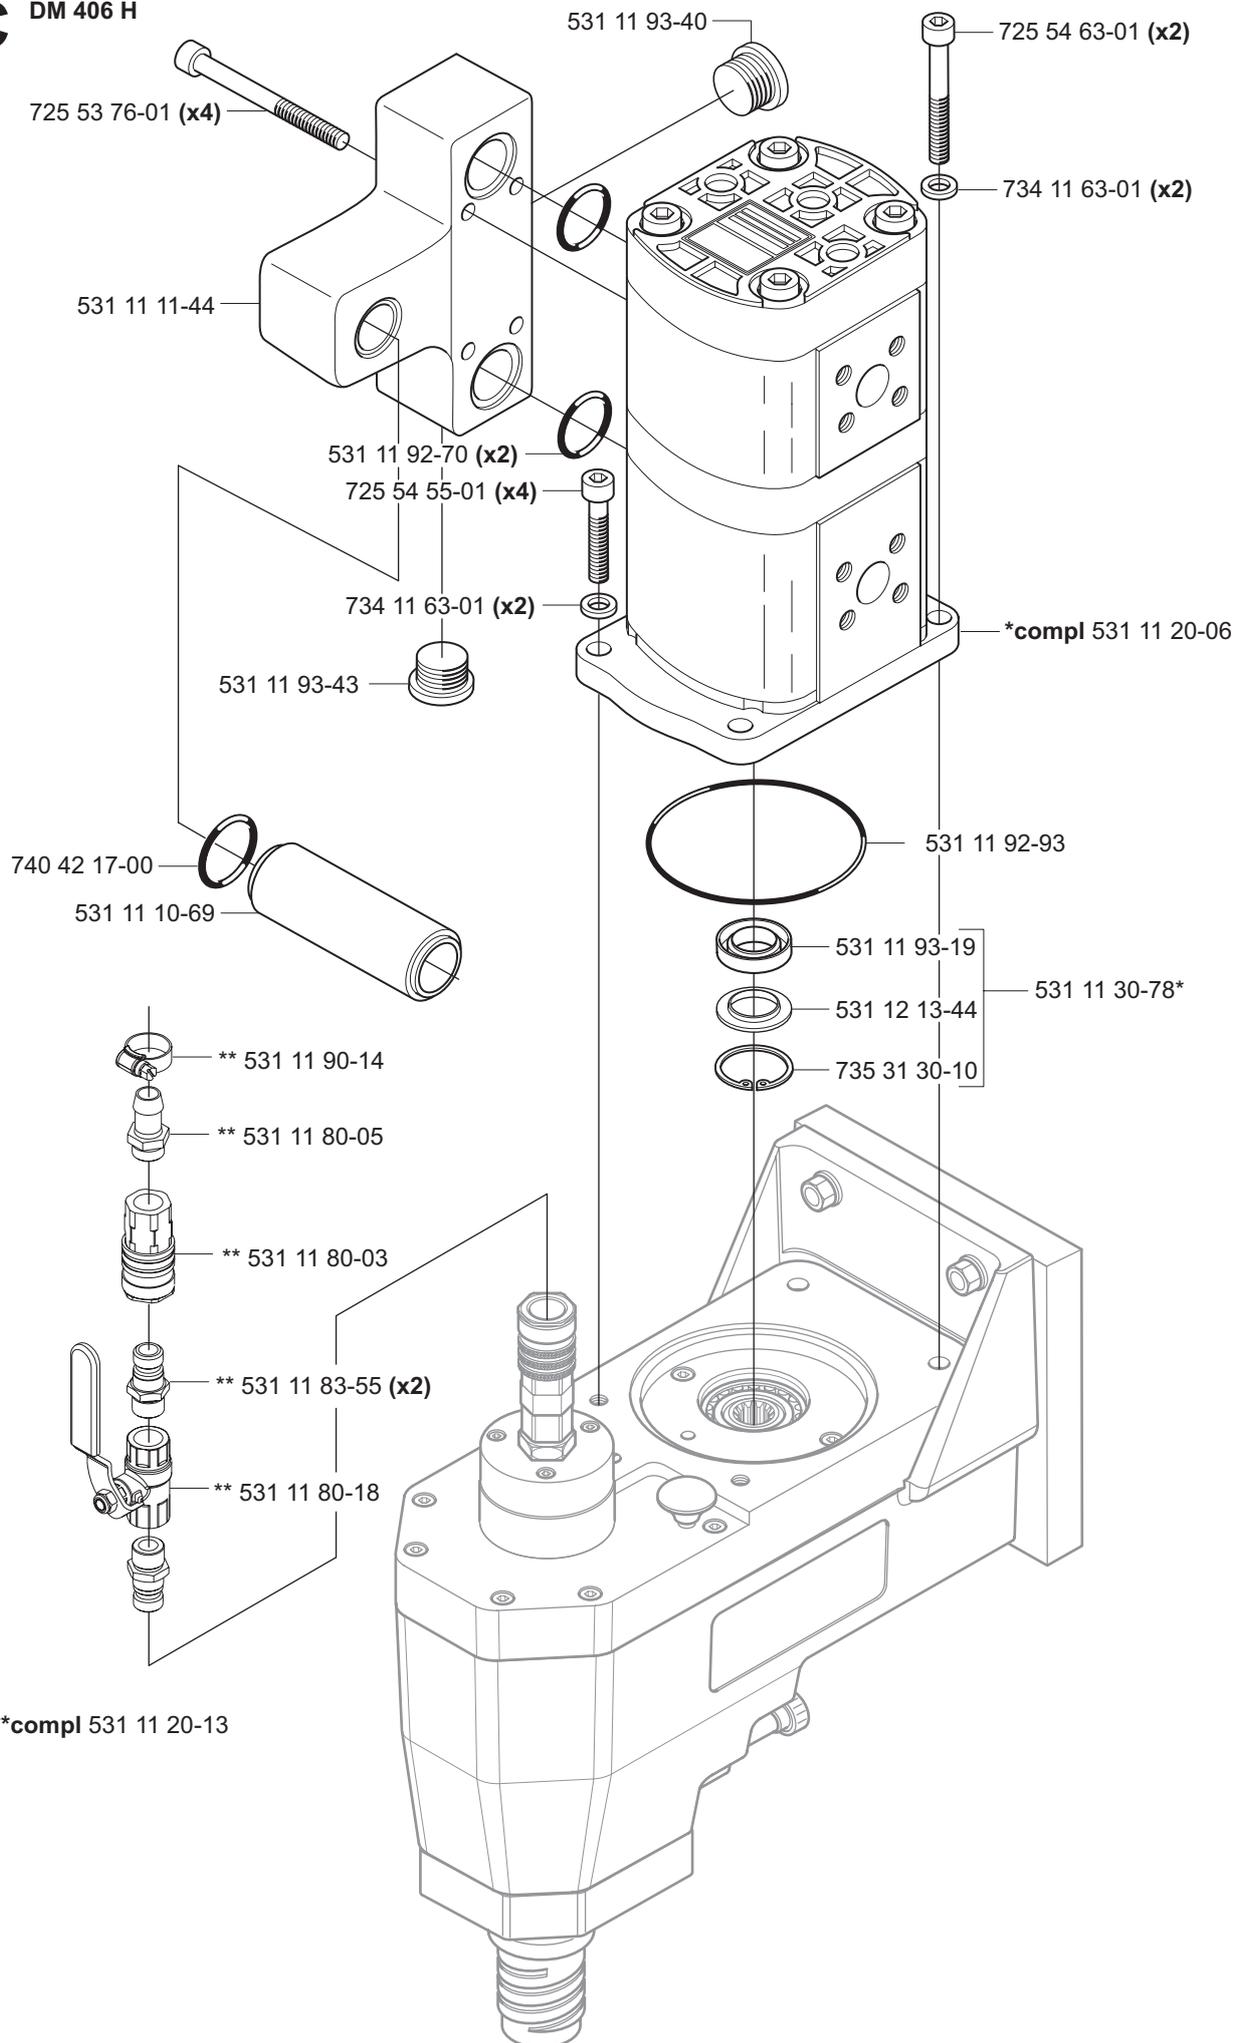

D DM 406 H

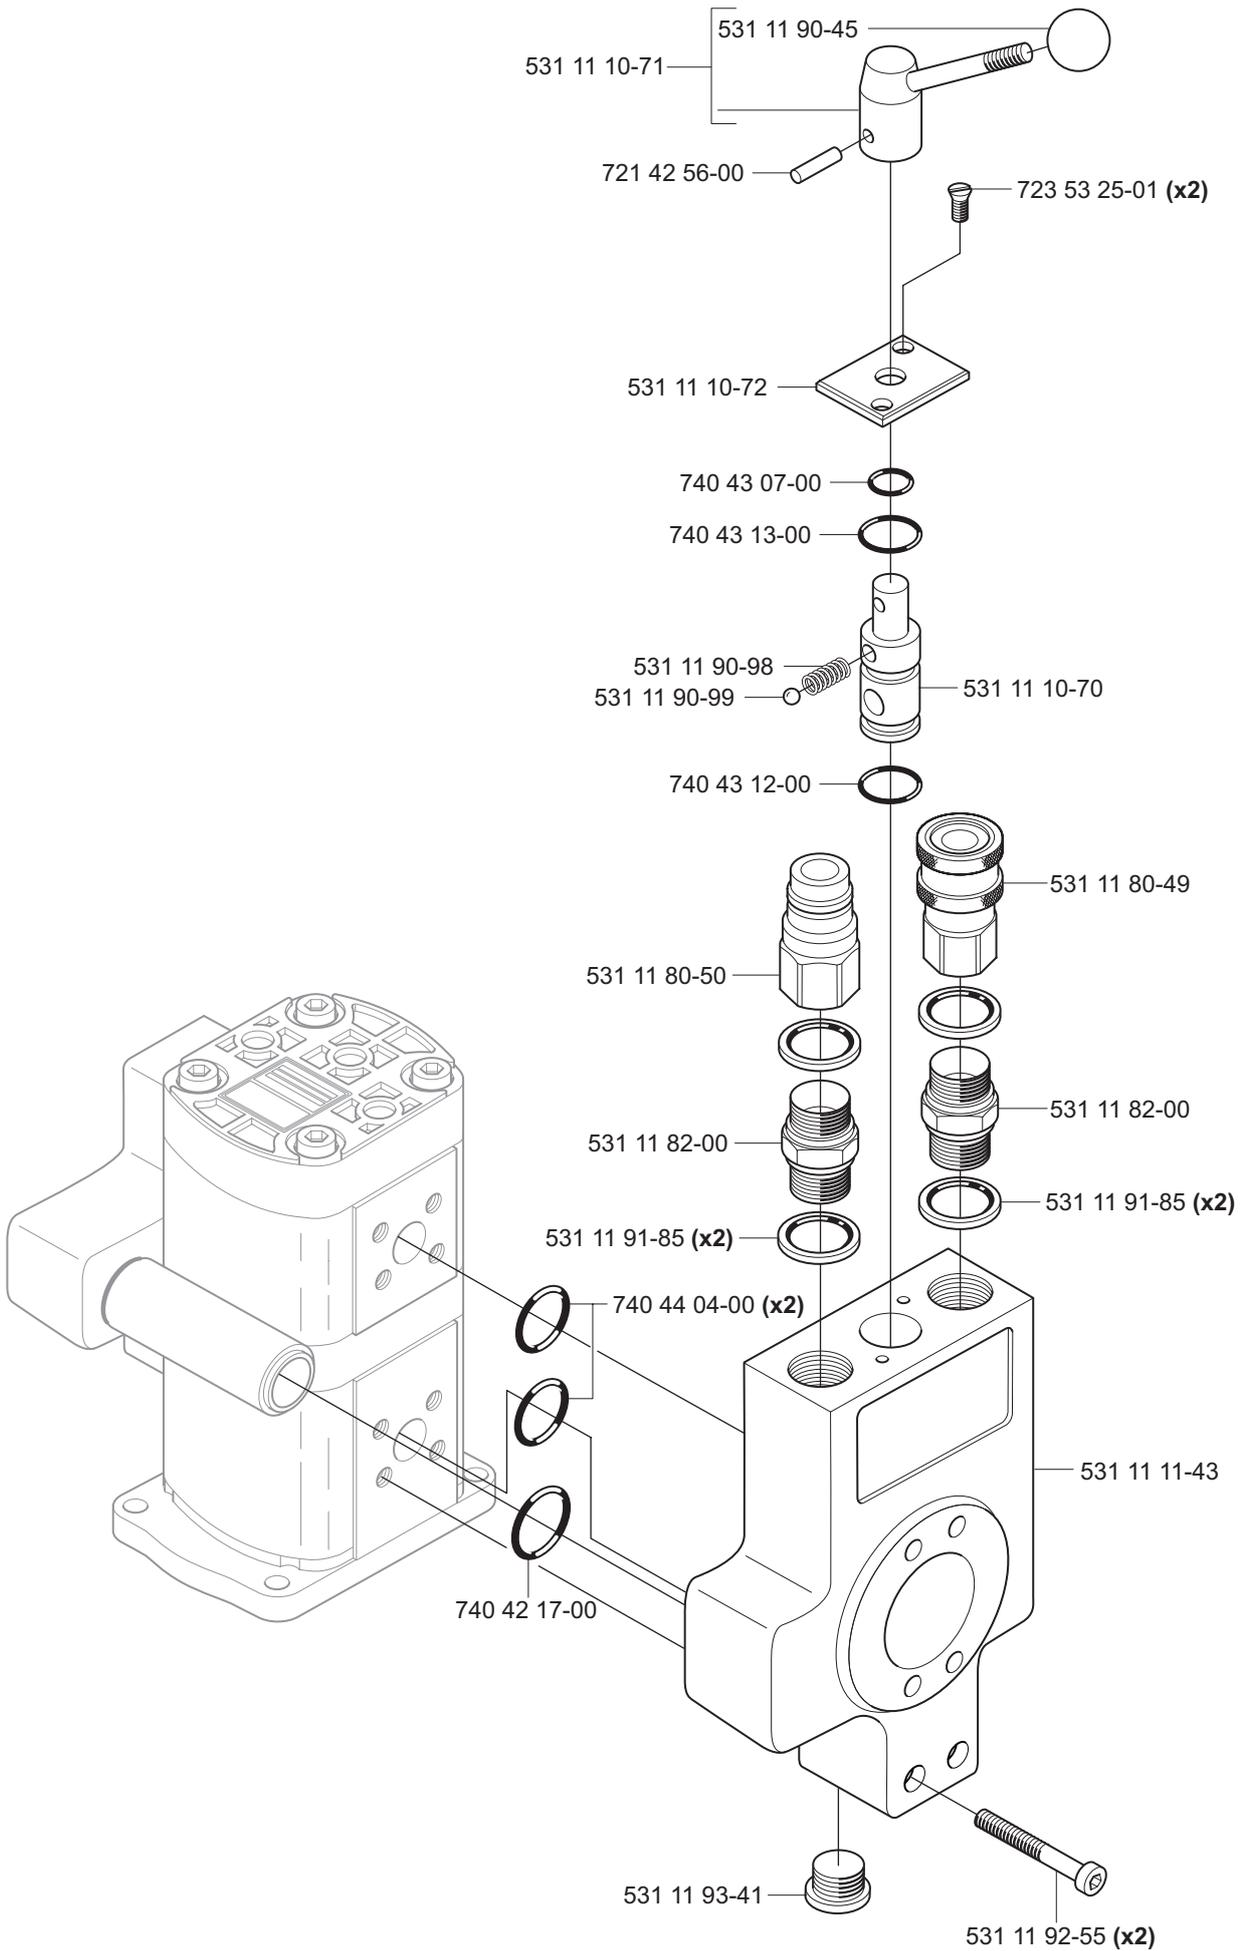

E DM 406 H

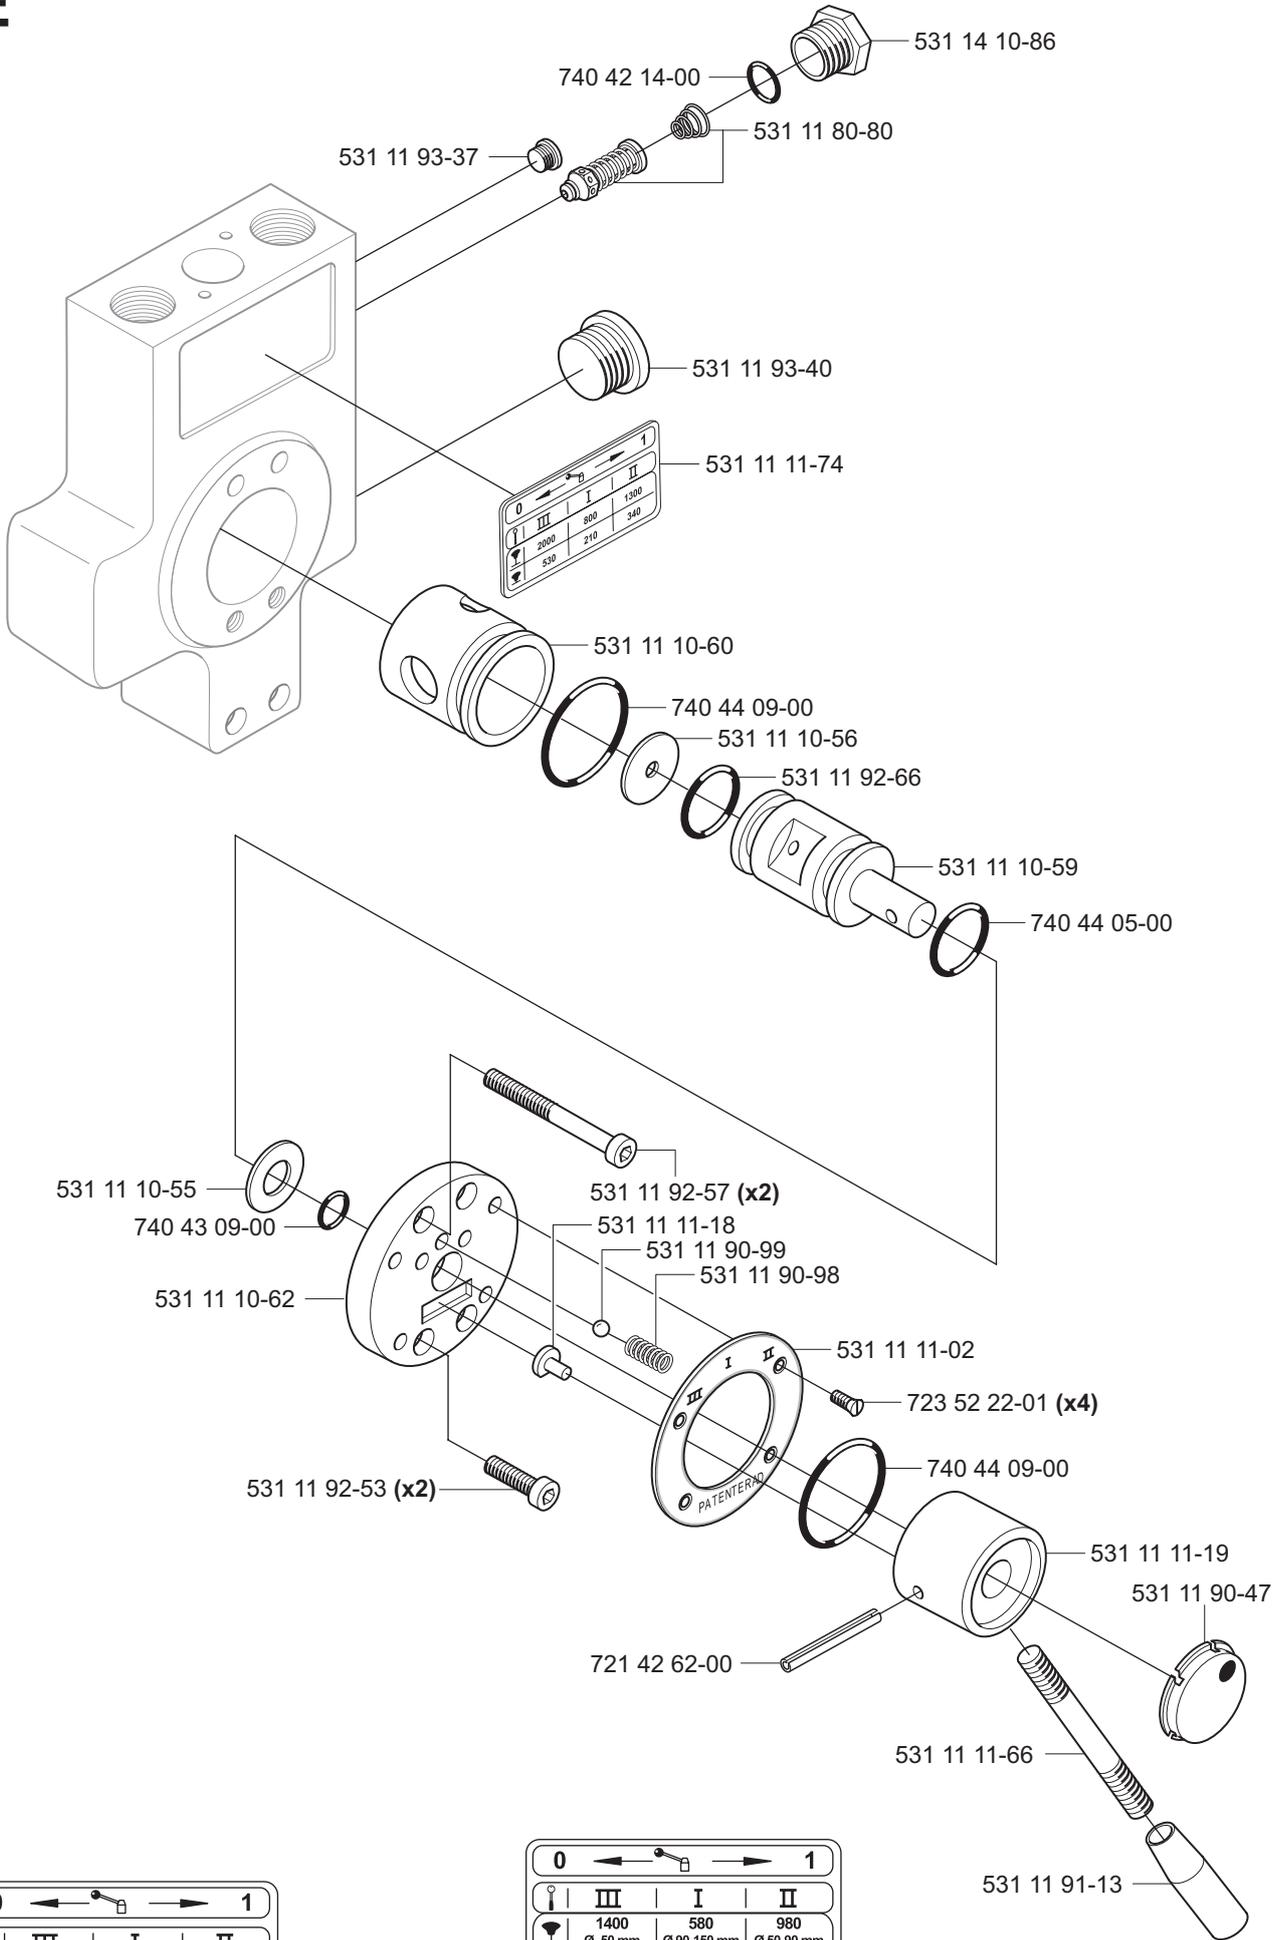


0	← →			1
III	I	II		
1400	580	980		
340	120	230		

531 11 11-74


0	← →			1
III	I	II		
1400 Ø 50 mm Ø 2"	580 Ø 90-150 mm Ø 4"-6"	980 Ø 50-90 mm Ø 2"-4"		
340 Ø 150-250 mm Ø 6"-10"	120 Ø 400-600 mm Ø 16"-24"	230 Ø 250-400 mm Ø 10"-16"		

531 11 11-85 (US only)

504 05 83-01

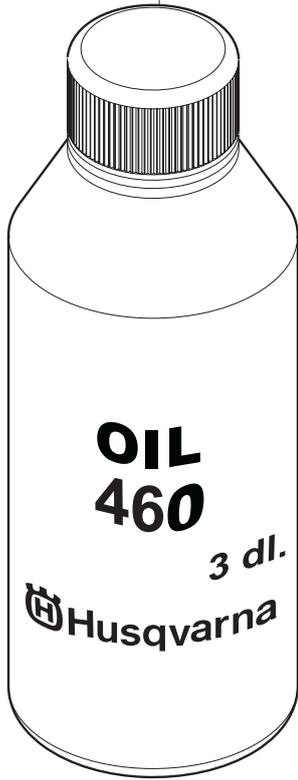

531 11 90-32 (32mm)

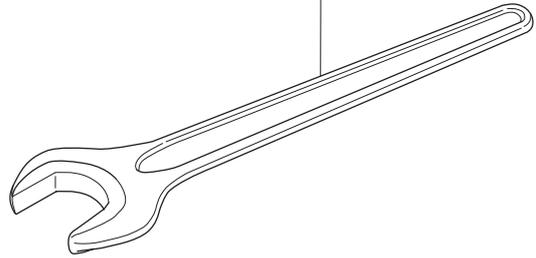

531 11 90-33 (41mm)

